

HOW TO OPEN YOUR BAZOOKAGOAL™

Please read these instructions carefully, before handling the BazookaGoal for the first time.




INSTRUCTIONS
FOR SAFE USE




WARNING
MIND YOUR
HANDS

- 1 Loosen the main carry strap by opening the plastic buckle and adjusting the length, then unhook one end of the strap from the BazookaGoal.

Warning: Do not attempt to push the BazookaGoal release button before you have pulled out the side poles from the crossbar as illustrated in the steps below.


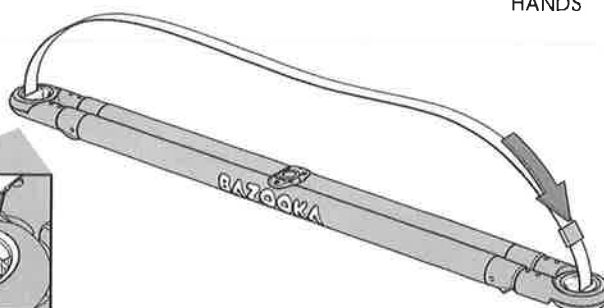


- 2 Open the three large Velcro strips to release the net from its containment.

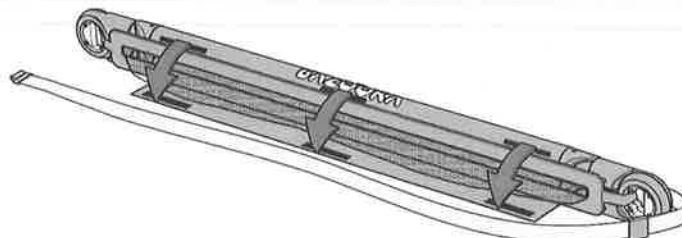

- 3 With a firm grip on one of the yellow spring joints, holding over both crossbars with the other hand, pull the first side pole straight out, until it is easy to fold it downwards to a 90 degree angle.


Repeat this on the opposite end of the BazookaGoal.

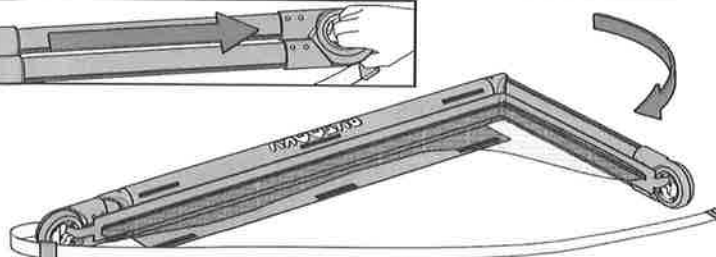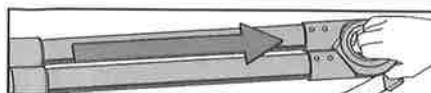

- 4 With both ends of the goal extracted and folded correctly, the BazookaGoal is ready to be launched.



Press the BazookaGoal release button, located in the middle of the crossbars. Strong, internal spring coils will force the goal to open when the button is pressed.

Keep a grip on the crossbar to guide it open in a calm fashion.

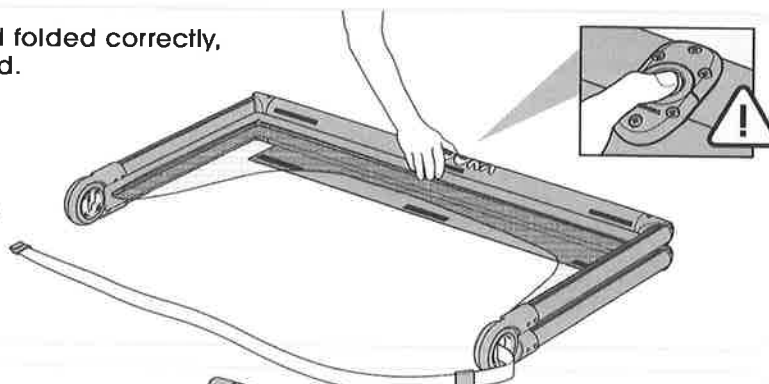


- 5 Reattach the loose end of the carry strap, and tighten the strap, by adjusting it and closing its plastic buckle.

Note: The strap is designed to prevent the side poles from being pushed outwards during rough use and to ensure that the frame becomes more stable when hit hard by a ball. Although it is possible to use the BazookaGoal without the strap, it is highly recommended that you keep it attached and tightened when in use. For floor hockey and inline hockey, where smaller balls are used, there is less need for the strap to be attached.

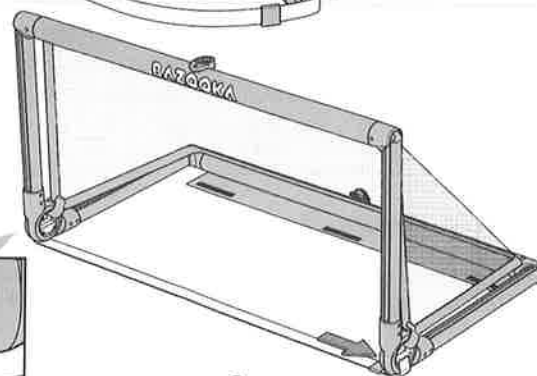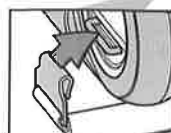

Do not leave the BazookaGoal folded in temperatures higher than +30 Celcius / +86 Fahrenheit to avoid PVC tube deforming.

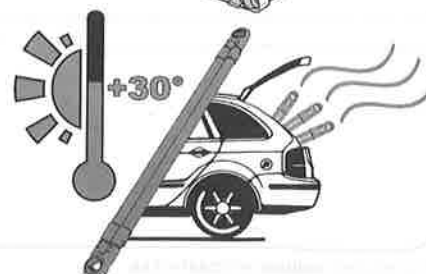

Visit bazookagoal.com for more info and videos



INSTRUCTIONS
FOR SAFE USE




WARNING
MIND YOUR
HANDS

Please read these instructions carefully, before handling the BazookaGoal for the first time.

HOW TO CLOSE YOUR **BAZOOKAGOAL™**

- 1 Loosen the strap/goal line, and unhook one end of it from the BazookaGoal.

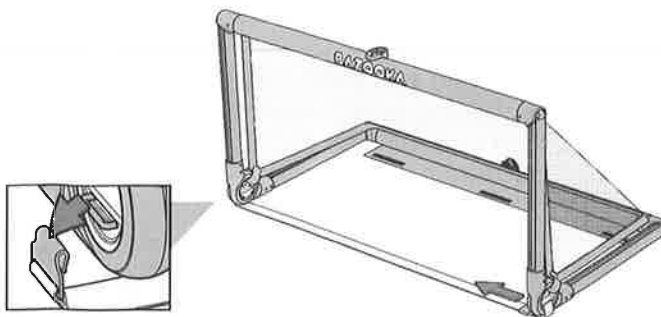


- 2 Close the BazookaGoal by pushing down on the cross bar, lowering it until the two parts of the BazookaGoal button lock together.

Warning: Mind your hands when handling the BazookaGoal due to the foldable nature of the product.




- 3 Lift out one side pole until it is straight, in line with the cross bars, and then push it into the cross bars. Mind not to pinch your fingers/hand during this process.

Repeat the process on the opposite end of the BazookaGoal.

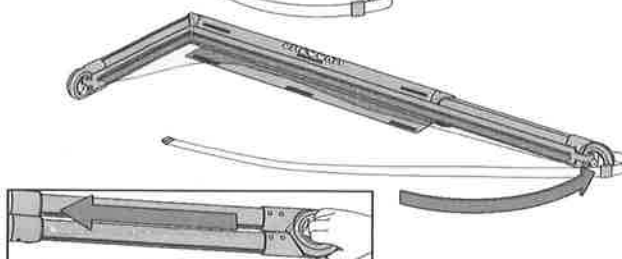


- 4 Fold or roll the net mesh into a tidy bunch, and close the fabric flap over it by connecting the three large Velcro strips.

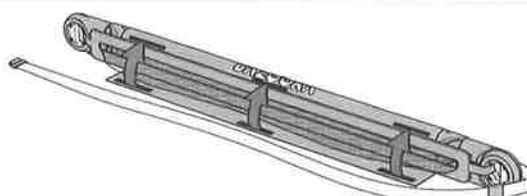

- 5 Reattach the loose end of the carry strap, and adjust the strap so it is suitable for carrying the BazookaGoal on your shoulder.

Finally fasten the Velcro of the shorter "belt strap", around both the goal AND the carry strap, as this results in the BazookaGoal hanging better on your shoulder.

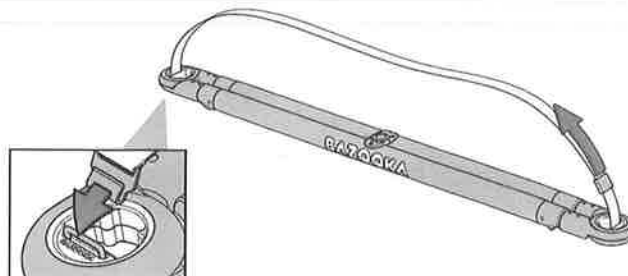


Warning: The BazookaGoal is designed to handle normal use for football play and other ball games. Be aware that due to the nature of the plastic material in the frame and joint construction, this product will not withstand irregular use, such as sitting on the crossbar or bending/pressing the frame in ways not described and illustrated in this folding instructions.


Warning: This product has spring coil loaded joints which automatically open the frame when the release button is pressed, but only after the side poles have been correctly pulled out from the crossbar and folded 90 degrees.



Do not leave the BazookaGoal folded in temperatures higher than +30 Celcius / +86 Fahrenheit to avoid PVC tube deforming.

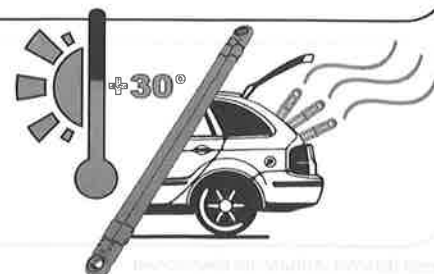

Visit bazookagoal.com for more info and videos

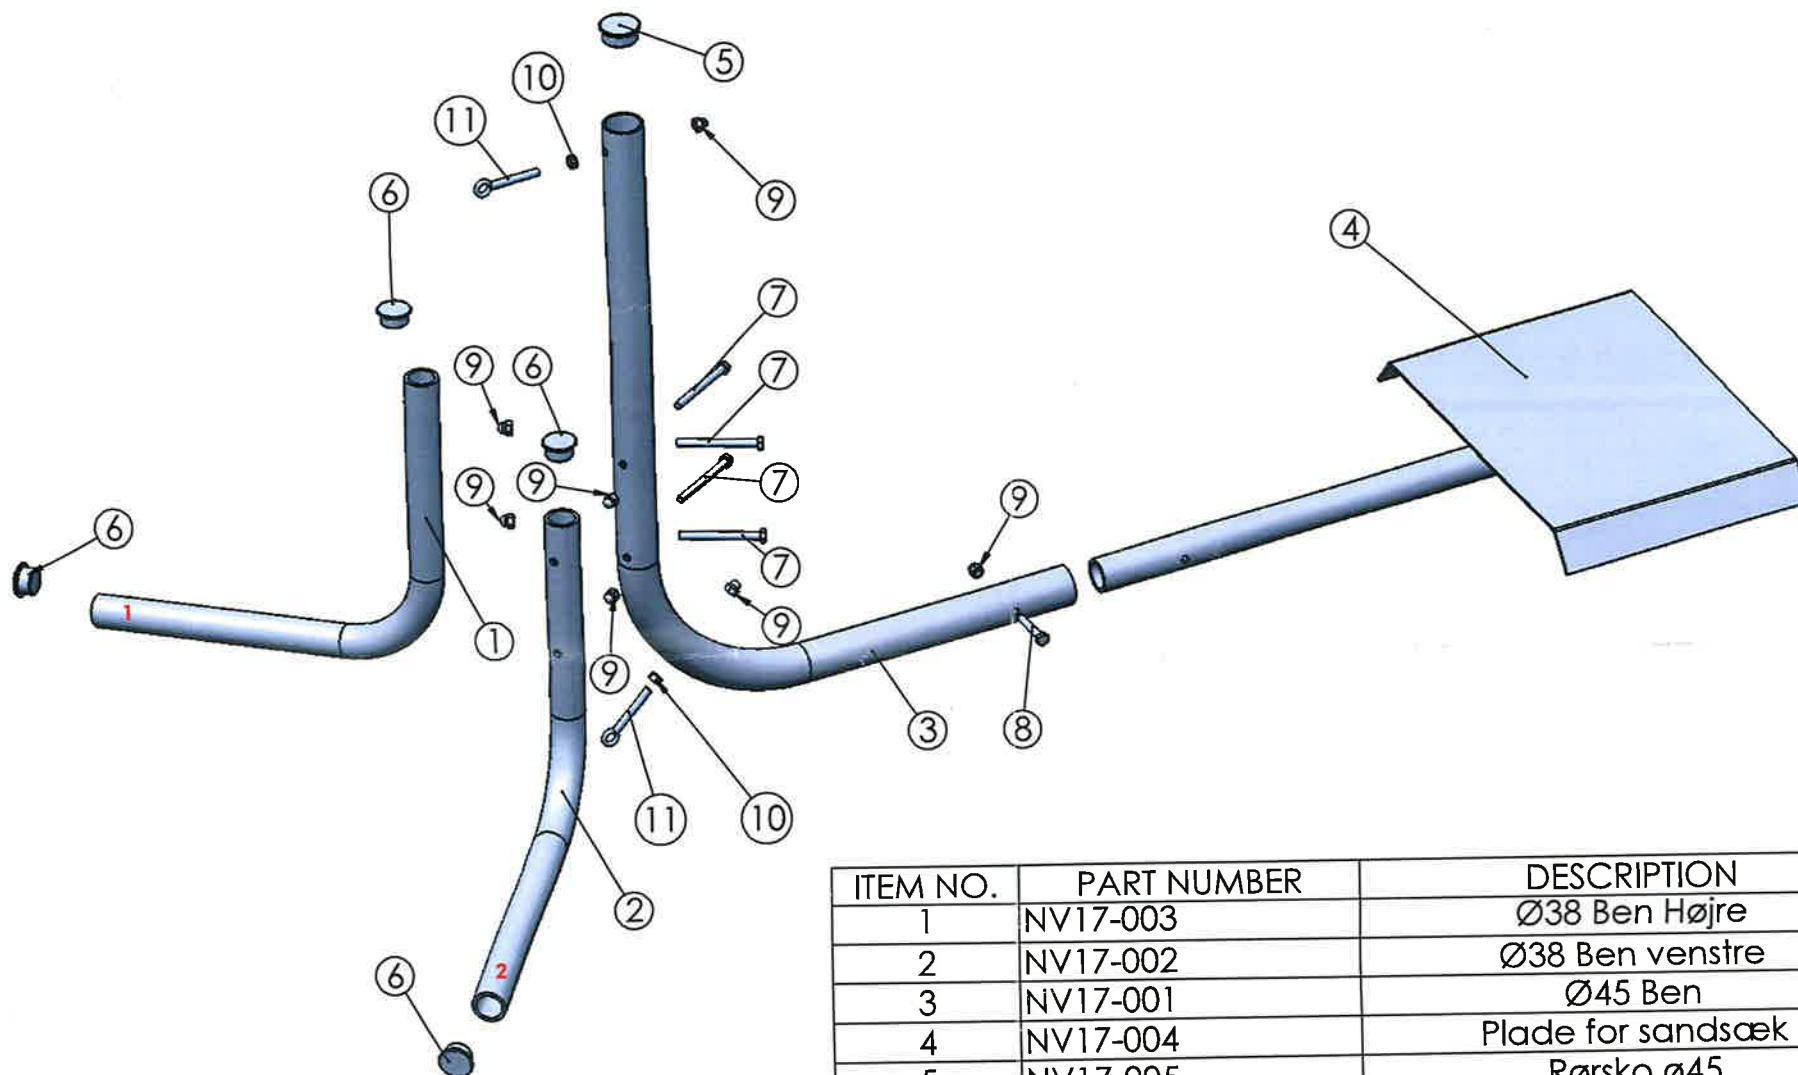

Bemærk!
Højre ben er mærket med 1
Venstre ben er mærket med 2

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	NV17-003	Ø38 Ben Højre	1
2	NV17-002	Ø38 Ben venstre	1
3	NV17-001	Ø45 Ben	1
4	NV17-004	Plade for sandsæk	1
5	NV17-005	Rørsko ø45	1
6	NV17-006	Rørsko Ø38	4
7	NV17-007	M8x90 bolt	4
8	NV17-008	M8X50 bolt	1
9	NV17-009	M8 Topmøtrik	7
10	NV17-010	M8 møtrik	2
11	NV17-012	M8 Øjebolt Lille	2

